


### Instructions for Bluetooth

Turn on Bluetooth on the cellphone, search Bluetooth device name “BEYOND” and press match or connect, there will be a Bluetooth icon besides the successful connected Bluetooth devices and the word CONNECT will display on the screen. If pairing is successful, BT AUD mode will show in MOD function mode. In BT AUD mode, users can play music, play games on cellphone, answer phone calls by pressing Volume button and hang up by pressing BND button.

# USER'S MANUAL

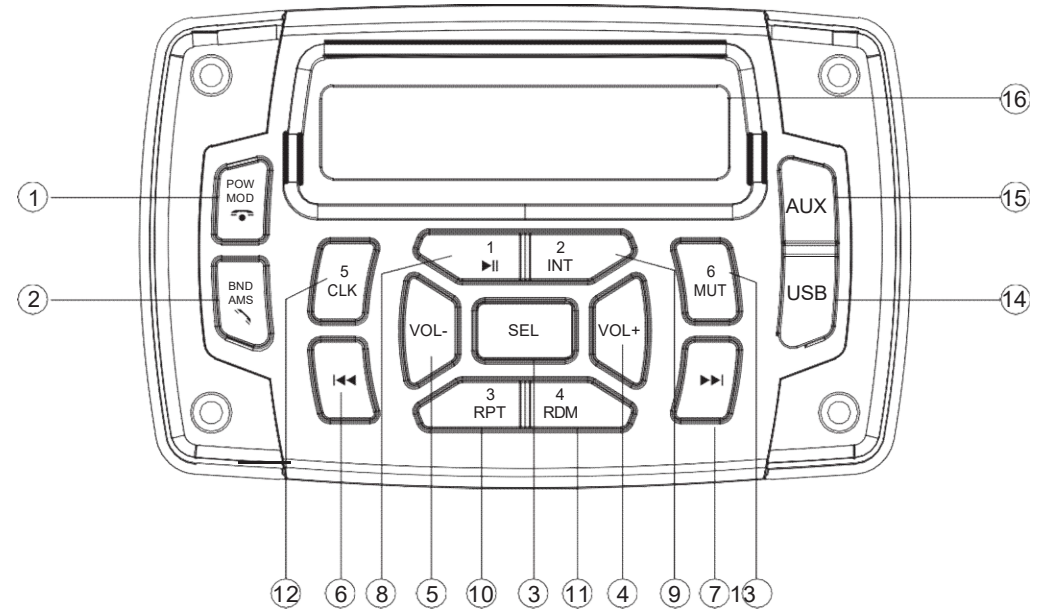

- |                               |          |
|-------------------------------|----------|
| 1.POW/MOD/📶                   | 9.2/INT  |
| 2.BND/AMS/📞                   | 10.3/RPT |
| 3.SEL                         | 11.4/RDM |
| 4.VOL+                        | 12.5/CLK |
| 5.VOL-                        | 13.6/MUT |
| 6.Tracks selecting button (⏮) | 14.USB   |
| 7.Tuning selecting button(⏭)  | 15.AUX   |
| 8.1/PAU                       | 16.LCD   |

1、PWR/MOD/ 

Short press start, long press shut down. Short press on boot status is a function of [mode button]. If there is [USB / SD card] in the computer, each short press will switch to another function. The state is switched back and forth between [radio-USB-SD-AUX-BT], and the power-on state automatically enters the shutdown after pressing 3 seconds. Machine status, shutdown status will be automatically booted by a short press.

2、BND/AMS/

Repeated short press this key, the display screen will show [FM1], [FM2], [FM3], in the radio state, long press this key for 3 seconds, will automatically store the radio. APS: In the radio state, press this button to execute browsing memory on the digital button, long press can automatically search and store in the digital button 1-6. In the radio interface, short press 1-6 radio station backward selection (jumping platform), long press for storage station.

3.SEL

When power is on, press SEL button to select functions:

BAS/TRE/LOUD/RTC.OFF.

BAS: Bass adjustment. Turn clockwise to enhance the bass and the maximum +7; Turn counterclockwise to reduce the bass and the maximum is -7. Users can use this mode to adjust the bass.

LOUD: Switch for bass enhancement. Turn clockwise to switch LOUD ON and OFF.

RTC. OFF: Switch for clock display. Turn clockwise to switch clock display ON and OFF.

4/5、VOL + /VOL-

Rotate the button "VOL" clockwise to increase volume "0-40",

Rotate the button "VOL" anticlockwise to lower volume. ■

6/7、TUNE/TRACK BUTTONS (   )

A. When long pressing the TUNE/TRACK button (more than 2 seconds) during play. The speed

B. Short press the button during playback to skip to next to track or back one track.

8、1/PAU

On the Radio mode: Store stations when on Radio mode short press on will enter preset station. Long press on 3 seconds will automatically save current station.

On USB/SD mode It's used for PLAY/PAUSE

9、2/INT

On the Radio mode: Store stations when on Radio mode short press on will enter preset station. Long press on 3 seconds will automatically save current station.

On USB/SD mode: Press on, it is 10 seconds preview function.

10、3/RPT

On the Radio mode: Store stations when on Radio mode, short on will enter preset station. Long press on 3 seconds will automatically save current station

On USB/SD mode: Press this it will switch over form REP1, REP ALBUM and REP ALL

11、4/RDM

On the Radio mode: Store stations when on Radio mode, short press on will enter preset station. Long press on 3 seconds will automatically save current station.

On USB/SD mode: It's used for RDM .

12、5/CLK

On the Radio mode: Store stations when on Radio mode ,short press on will enter preset station. Long press on 3 seconds will automatically save current station .Short press on is CLK function, On clockstation, Press SEEK+ to adjust hour time, SEEK- to adjust minute.

13、6/MUT

On the Radio mode: Store stations when on Radio mode, short press on will enter preset station. Long press on 3 seconds will automatically save current station .Press it to mute down sound Press it again to release this mode and recover previous volume level.

14、USB 15、AUX 16、LCD